



OWNER'S MANUAL

DTU GEN2

PARTS

NOTE: MANUAL including SPECIFICATIONS, subject to change without notice.

All ratings specified are based on structural factors only,
not vehicle capacities or capabilities.



Miller Industries Towing Equipment Inc. 8503 Hilltop Drive Ooltewah, Tennessee 37363 Phone (423) 238-4171 • FAX (423) 238-5371

LIMITED WARRANTY

MILLER INDUSTRIES TOWING EQUIPMENT INC., hereinafter referred to as MILLER, warrants to the original purchaser that each new MILLER wrecker or other MILLER products will be free from defects in material and workmanship for a period of twelve (12) months from date placed in service, but in no event shall such warranty period exceed twenty-four (24) months from date of manufacture by MILLER. The purchaser must promptly notify MILLER in writing of any failure in material or workmanship. In no event shall MILLER accept such notification later than twenty-four (24) months from date of delivery or twelve (12) months from date placed in service, whichever is earlier.

MILLER's obligation under this warranty, statutory or otherwise, is limited to the repair or replacement at the MILLER factory, or at a point designated by MILLER, of such part or parts as shall appear upon inspection by MILLER to be defective in material or workmanship. New or remanufactured parts will be used for any replacement at MILLER's option. This warranty is not transferable. This warranty does not obligate MILLER to bear the cost of labor or transportation charges in connection with the repair or replacement of any parts found to be defective, nor shall it apply to a product upon which repairs or alterations have been made unless authorized by MILLER.

EXCEPT AS EXPRESSLY SET FORTH IN THIS WARRANTY, MILLER MAKES NO OTHER WARRANTY, EXPRESS OR IMPLIED, AND HEREBY DISCLAIMS ALL OTHER WARRANTIES INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. MILLER shall in no event be liable for claimed downtime, claimed loss of profits or goodwill, or any other special, incidental, indirect, or consequential damages concerning or relating to any product or parts, whether based on negligence, strict liability, breach of contract, breach of warranty, misrepresentation or any other legal theory, regardless of whether the loss resulted from any general or particular requirement which MILLER knew or had reason to know about at the time of sale.

MILLER MAKES NO WARRANTY, EXPRESS OR IMPLIED, AS TO THE FINISHED PRODUCTS MANUFACTURED OR SUPPLIED BY ANOTHER MANUFACTURER AND SUPPLIED BY MILLER TO PURCHASER, including, but not limited to, any vehicle to which a MILLER product may be affixed or any accessories or wire rope, and MILLER EXPRESSLY DISCLAIMS ANY IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE AS TO SUCH EQUIPMENT OR PRODUCTS. This language shall in no way affect or diminish the rights of the purchaser to rely on such warranties as are extended by such manufacturers or suppliers. MILLER shall, to the extent permitted under applicable law, pass on to the purchaser such manufacturer's or seller's warranty.

MILLER, whose policy is one of continuous improvement, reserves the right to improve its products through changes in design or materials as it may deem desirable without being obligated to incorporate such changes in products previously sold. This warranty is not intended to cover or include the following items, which are set forth by way of example and not limitation:

- A. Normal deterioration of trim, paint, lettering, and appearance items due to wear or exposure to weather, road conditions, road treatments, etc.
- B. Any damage or defect due to accident, misuse, abuse, improper or unauthorized repairs, failure to provide reasonable and necessary maintenance, or uses for which the equipment was not designed or intended.
- C. Alterations or modifications that affect performance, operation or reliability.
- D. Normal maintenance parts including, but not limited to, wear pads, bushings, wire rope, mud flaps, fenderettes, light bulbs, hydraulic oil, filters, and tow sling belts.

IT IS EXPRESSLY UNDERSTOOD THAT MILLER MAKES NO IMPLIED WARRANTY THAT MILLER PRODUCTS SHALL BE FIT FOR THE PURPOSE OF LIFTING OR MOVING PEOPLE OR FOR ANY OTHER IMPROPER USE.



Miller Industries Towing Equipment Inc. 8503 Hilltop Drive Ooltewah, Tennessee 37363 Telephone (423) 238-4171

SERIAL NUMBER

OWNER, USER AND OPERATOR:

We appreciate your choice of our towing and recovery unit for your application. Our number one priority is user safety which is best achieved by our joint efforts. We feel that you can make a major contribution to safety if you, as the equipment owner and operator:

- 1. Comply with Federal, State, and Local Regulations.
- 2. Read, Understand, and Follow the Instructions in this Manual.
- 3. Use Good, Safe Work Practices in a Common Sense Way.
- 4. Only have Authorized and Trained Personnel performing maintenance on the Towing and Recovery Unit.

TABLE OF CONTENTS

It is assumed by the manufacturer that the Owner/Operator has a thorough knowledge of the accepted and lawful retrieval and towing methods as dictated by his city, county or state. The manufacturer rejects any liability claim that may result from the incorrect or unlawful application of its equipment.

Section I - PARTS

SUBFRAME ASSEMBLY	I-2 & I-3
BOOM ASSEMBLY	I-4 & I-5
TOWER & UNDERLIFT ASSEMBLY	I-6 thru I-9
BOOM LIFT HYDRAULICS	I-10 & I-11
UNDERLIFT HYDRAULICS	I-12 & I-13
PUMP, VALVE & FILTER HYDRAULICS	I-14 & I-15
WINCH HYDRAULICS & AIR FREE SPOOL	I-16 & I-17

Section I - PARTS

This Section is provided by the manufacturer for the purpose of ordering any component part of the **HOLMES DTU GEN2** that may be required when part replacement is necessary. Be certain to use only original equipment replacement parts for warranty purposes as well as for keeping your unit in its original state and optimum operating capacities.


When ordering replacement or spare parts be sure to provide the following information to the manufacturer's **Parts Department**.

- 1. Manual Number & Date of Publication
- 2. Manual Page Number
- 3. Page Title
- 4. Reference Number of Part Desired
- 5. Part Number
- 6. Part Description
- 7. Quantity of Part Desired

Providing this information will help ensure that the correct parts will be delivered to you in an expedient manner without delay. Should additional information be required for repair or replacement of certain components, contact your Wrecker Manufacturer Authorized Representative.

The Manufacturer reserves the right, without notice or obligation, to improve or modify their products, which may change the specifications, models and feature availability.

Section I - PARTS (cont'd) SUBFRAME ASSEMBLY

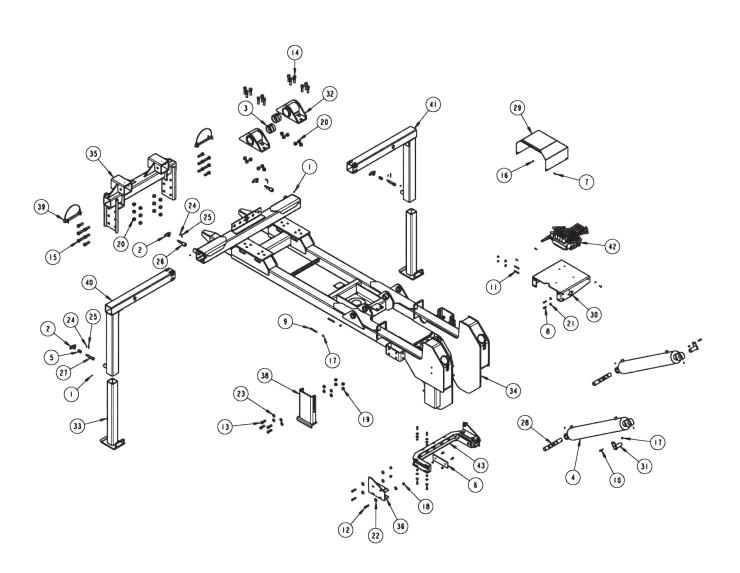


Section I - PARTS (cont'd) SUBFRAME ASSEMBLY

ITEM	PART NUMBER	DESCRIPTION	QTY
1 2 3 4 5 6 7 8 9 10 11 12 13 14	0300113 0300331 0302538 0303091 0304653 0307450 0400070 0400122 0400130 0400132 0400146 0400188 0400274 0400286	GREASE FITTING, 1/4-28 STRAIGHT SS PLUNGER HANDLE SPRING BUSHING, 3.5OD X 3ID X 2.5 CYLINDER, HYDRAULIC BOOM LIFT SPRING - HEAVY DUTY CAMLOCK SLIDE PAD, BUMPER 1/4-20 X 1 HHCS GR5 ZP 3/8-16 X 1 1/4 HHCS GR5,ZP 3/8-16 X 3 1/2 HHCS GR5,ZP 3/8-16 X 1 1/2 HHCS GR5,ZP 3/8-16 X 2-1/4 HHCS GR5,ZP 3/8-16 X 2-1/4 HHCS GR5,ZP 3/8-11 X 2 HHCS GR 8 YZ P 5/8-11 X 2 HHCS GR 8 YZ P 3/4-10 X 2-3/4 HHCS GR8 GOLD	8 4 2 2 2 2 4 10 2 2 6 8 12
15 16 17 18 19 20 21 22 23 24 25 26 27 28 29	0400288 0400367 0400392 0400408 0400426 0400431 0400480 0400492 0400563 0400563 0700526 0705046 0707341 0723571	3/4-10 X 2-1/2 HHCS GR8 GOLD 1/4-20 NYLOCK HEX NUT ZP 3/8-16 NYLOCK HEX NUT ZP 1/2-13 NYLOCK HEX NUT ZP 5/8-11 NYLOCK NUT GR8 ZP 3/4-10 NYLOCK HEX NUT GR8, ZP 3/4-10 NYLOCK HEX NUT GR8, ZP 1/2 FLAT WASHER ZP 1/2 FLAT WASHER ZP 5/8 FLAT WASHER GR8 5/32 X 3/4 ROLL PIN ZP 3/16 X 1-3/4 ROLL PIN ZP PLUNGER PIN PLUNGER PIN PIN - LIFT CYLINDER VALVE COVER	12 4 20 6 8 24 12 16 4 4 2 2 2
30 31 32 33 34 35 36 37 38 39 40 41 42 43 44	0726478 0726478 0726521 0802240 0804405 0806811 0810478 0810482 0810483 0810484 0810486 0902947 0908260 0908261 0910765 0911897	PLATE - GUSSET - LEG CROSSMEMBER CHANNEL - VALVE MOUNT PIN - LIFT CYL PIVOT BOOM PIVOT BRKT INNER VERT. LEG WLMT DTU GEN 2 SUBFRAME WELDMENT DTU GEN 2 FRONT MOUNT WELDMENT CROSSMEMBER MTG WELDMENT LH CROSSMEMBER MTG WELDMENT RH REAR SUPPORT WELDMENT PIN- RETAINER ASSY STABILIZER ASSY - LH VALVE ASSY - 12V WALVOIL KIT - TRUCK CROSSMEMBER	2 1 2 2 2 1 1 1 1 2 2 1 1 1 1 1

Section I - PARTS (cont'd)

BOOM ASSEMBLY

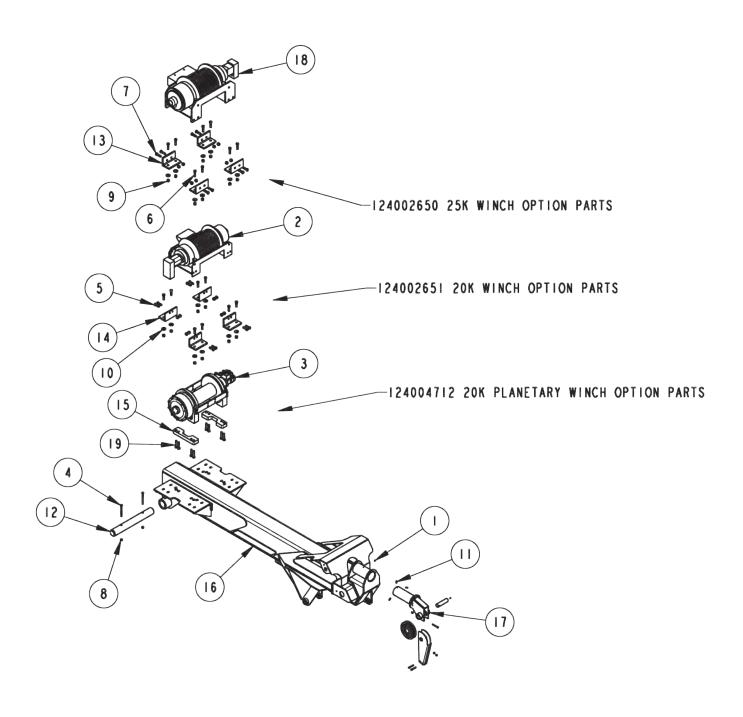


Section I - PARTS (cont'd)

BOOM ASSEMBLY

ITEM
1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16 17 18 19


Section I - PARTS (cont'd) TOWER & UNDERLIFT ASSEMBLY

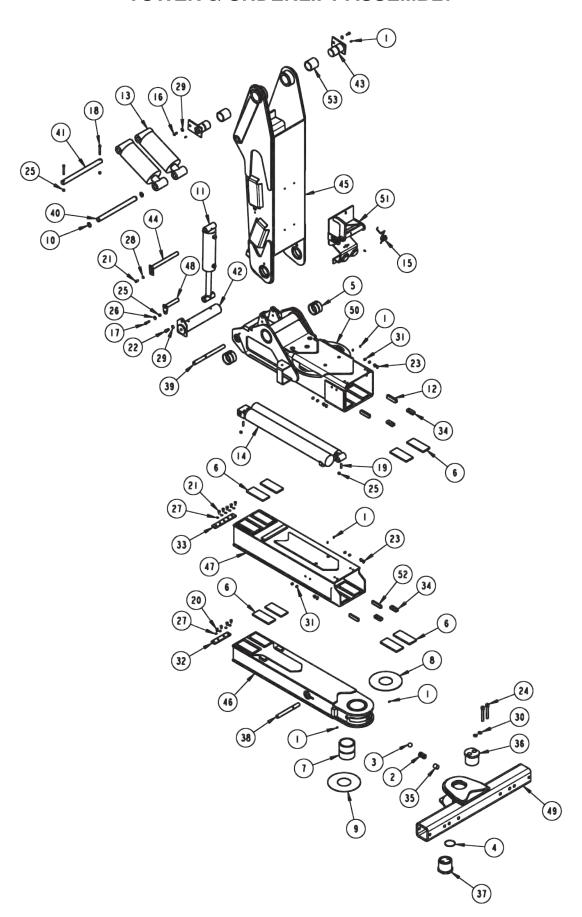

Section I - PARTS (cont'd) TOWER & UNDERLIFT ASSEMBLY

ITEM		DESCRIPTION	QTY
I I EIVI	PART NUMBER	DESCRIPTION	QIY
1	0300113	GREASE FITTING, 1/4-28 STRAIGHT SS DETENT SPRING	8
2	0301197		1
3	0301398	DETENT BALL	1
4	0301822	O-RING, PIVOT PIN	1
5	0302538	SPRING BUSHING, 3.50D X 3ID X 2.5	2
6	0302561	SLIDE PAD	8
7	0303088	BUSHING, PIVOT PIN	1
8	0303097	THRUST WASHER, 1/8" THICK	1
9	0303098	THRUST WASHER, 1/16" THICK	1
10	0303827	RETAINING RING	2
11	0306746	CYLINDER - HYDRAULIC FOLD	1
12	0307013	PAD - WEAR	2
13	0307040	CYL - U/L TILT	2
14	0307041	U/L EXTEND CYLINDER	1
15	0311909	SPRING, LH	1
16	0400126	3/8-16 X 1 HHCS GR5,ZP	2
17	0400132	3/8-16 X 1 1/2 HHCS GR5,ZP	1
18	0400133	3/8-16 X 3 HHCS GR5,ZP	2
19	0400139	SCREW, 3/8"-16 X 1-1/2" HEX SKT SET	2
20	0400147	3/8-24X 5/8 HHCS GR5 ZP	4
21	0400151	3/8-24 X 3/4 HHCS GR5 ZP	6
22	0400176	1/2-13 X 1 HHCS GR5,ZP	1
23	0400228	SCREW, 3/8"-24 X 5/8" BUTTON HEAD SKT	8
24	0400271	SCREW, 5/8"-11 X 4-1/2" SKT HD CAP 3/8-16 NYLOCK HEX NUT ZP	2 5
25	0400392	3/8 FLAT WASHER ZP	2
26 27	0400480 0400481	LOCKWASHER, 3/8" EXT TOOTH	9
21	0400461	LOCKWASHER, 3/6 EXT TOOTH	9


Section I - PARTS (cont'd) TOWER & UNDERLIFT ASSEMBLY (cont'd)

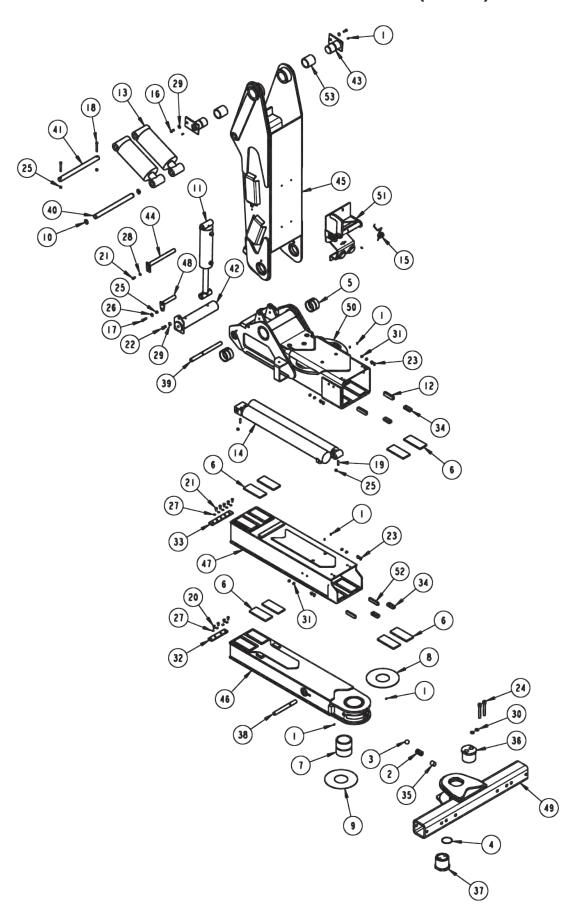

Section I - PARTS (cont'd) TOWER & UNDERLIFT ASSEMBLY (cont'd)

			ı
ITEM	PART NUMBER	DESCRIPTION	QTY
28 29 30 31 32 33 34 35 36 37 38 39 40 41 42 43 44 45 46 47 48 49 50 51 52 53	0400482 0400491 0400508 0400990 0706996 0707028 0707034 0708470 0710051 0710052 0716745 0716746 0716870 0718044 0802214 0802365 0802459 0805885 0805895 0806756 0903156 0906883 0911889 BK2003 RB0205	DESCRIPTION 3/8 HELICAL LOCKWASHER ZP 1/2 HELICAL LOCKWASHER ZP 5/8 HELICAL LOCKWASHER ZP 1/2-13 X 1/2 SKT HD SET SCREW ZP SPACER PAD PAD, BEARING STOP PLATE SPACER - DETENT BALL PIVOT PIN, TOP HALF PIVOT PIN, BOTTOM HALF EXTEND CYLINDER SHAFT EXTEND CYLINDER SHAFT SHAFT PIN - TILT CYL. BASE PIN-UNDERLIFT PIVOT PIN-TOWER PIVOT WLMT TOWER WLMT 3RD STAGE BOOM WLMT 2ND STAGE U/L BOOM WLMT PIN WELDMENT - FOLD CYLINDER 5" CROSSBAR ASSEMBLY U/L BOOM ASSY (5035) HOOK RETAINER ASSY PAD-WEAR SPLIT BUSHING	QTY 1 3 2 8 1 1 4 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1


Section I - PARTS (cont'd) BOOM LIFT HYDRAULICS

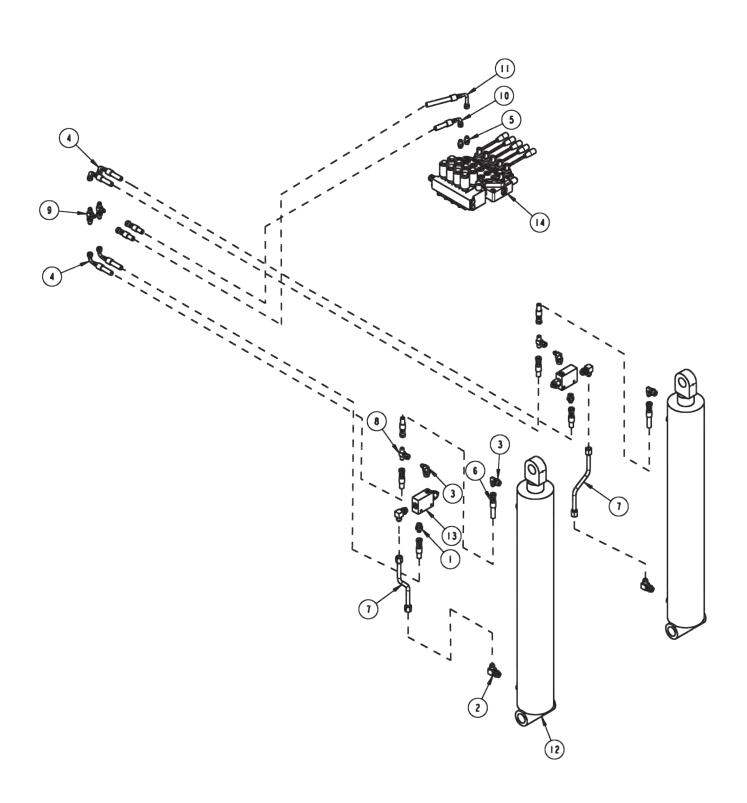

Section I - PARTS (cont'd) BOOM LIFT HYDRAULICS

ITEM	DADTAUMDED	DECODIDEION	OTV
ITEM	PART NUMBER	DESCRIPTION	QTY
1 2 3 4 5 6 7 8	0300044 0301388 0301470 0301473 0301522 0302035 0302568	CONNECTOR 6MJX8MB ELBOW, 8MJ-8MB90 FITTING - HYDRAULIC ELBOW 6MJ-8MB90 HOSE ASSEMBLY, 32" CONNECTOR 6MJ-6MB HOSE ASSEMBLY, 18" LG HYDRAULIC TUBING TEE, 6MJ-6MJ-6FJX	2 4 4 2 2 2 2
9 10 11	0302573 0302575 0302585 0302586	BULKHEAD RUN TEE, 6MJ-6BLKHD-6MJ W/NU HOSE ASSEMBLY, 32" HOSE ASSY - 54" LG	
1 12 13 14	0303091 0307107 0310844	CYLINDER, HYDRAULIC BOOM LIFT VALVE HOLDING 4000 PSI SAE VALVE - 5-SPOOL 12V WALVOIL DTU	2 2 1


Section I - PARTS (cont'd) UNDERLIFT HYDRAULICS

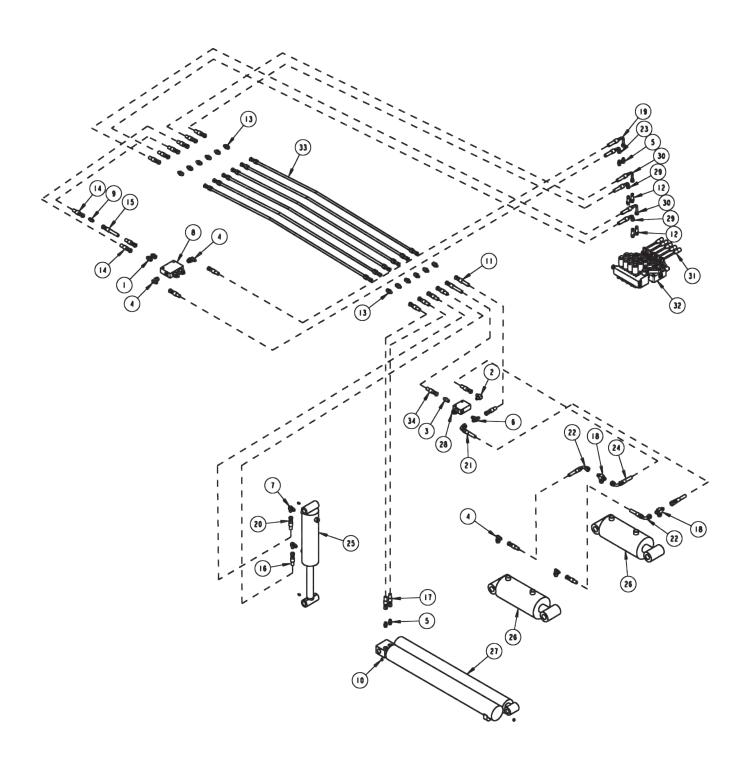

Section I - PARTS (cont'd) UNDERLIFT HYDRAULICS

ITEM	PART NUMBER	DESCRIPTION	QTY
1 2	0300044 0300142	CONNECTOR 6MJX8MB ELBOW, 6MJ-4MP90	2
3	0301425	CONNECTOR, 6MJ-6MP	1
4	0301470	FITTING - HYDRAULIC ELBOW 6MJ-8MB90	4
5	0301522	CONNECTOR 6MJ-6MB	4
6	0301619	BRANCH TEE, 6MJ-6MJ-6MB	1
7	0301620	FITTING, ELBOW, 6MJ-6MB90	2
8	0301730	DOUBLE HOLDING VALVE	1
9	0301837	INLINE ORIFICE	
10	0301895	GREASE FITTING, 1/8 NPT STRAIGHT	4
11	0302035	HOSE ASSEMBLY, 18" LG	1
12	0302033	FITTING, 6MJ-6MBL HYD	4
			12
13	0302514	ADAPTER, 8MJ-6MJ	12
14 2	0302596	HOSE ASSY - 34" LG	
15 2	0302805	HOSE ASSY - 10" LG	
16	0302812	HOSE ASSY - 78" LG.	1
17	0302813	HOSE ASSY - 108" LG	2
18	0302842	TEE, 8MJ-8MJ-8MB	2
19	0302883	HOSE ASSY - 79" LG.	1
20	0302911	HOSE ASSY - 88" LG.	1
21	0302914	HOSE ASSEMBLY, 12" LG	1
22	0302915	HOSE ASSEMBLY, 12" LG	2
23	0303170	HOSE ASSY - 75" LG.	1
24	0303561	HOSE ASSEMBLY, 12" LG	1
25	0306746	CYLINDER - HYDRAULIC FOLD	1
26	0307040	CYL - U/L TILT	2
27	0307041	U/L EXTEND CYLINDER	1
28	0307107	VALVE HOLDING 4000 PSI SAE	1
29	0307524	HOSE ASSEMBLY, 32"	2
30	0307525	HOSE ASSY - 120" LG	2
31	0310398	HANDLE - DIVERTER VALVE	5
32	0310844	VALVE - 5-SPOOL 12V WALVOIL DTU	1
33	916760001	HYDRAULIC TUBE ASSY	6
	310700001	TITORAGEIG TODE AGGT	
			I


Section I - PARTS (cont'd) PUMP, VALVE & FILTER HYDRAULICS

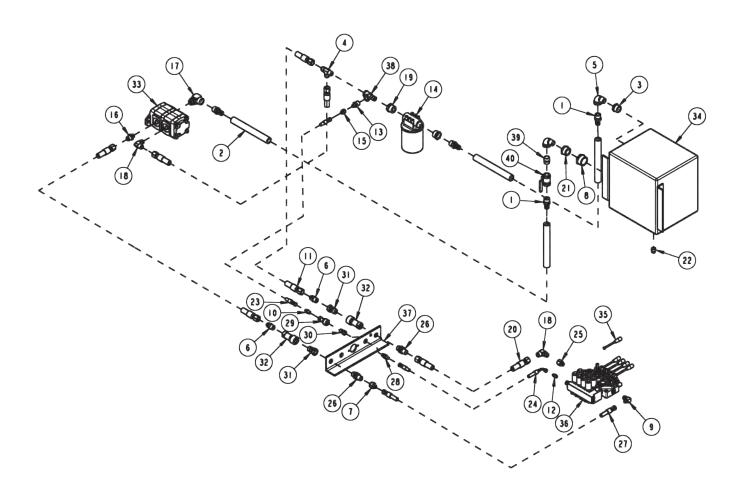

Section I - PARTS (cont'd) PUMP, VALVE & FILTER HYDRAULICS

ITEM	PART NUMBER	DESCRIPTION	QTY
1	0300056	BARB, 16C4-16MP	4
2	0300058	SUCTION HOSE, 1" I.D. 16C4	4
3	0300287	PIPE BUSHING, 1 1/4" TO 1" NPT REDUCER	2
4	0300553	TEE - 12 MJ-12MP-12MJ	1
5	0300692	STREET ELBOW, 1" 90°	2
6	0301092	ADAPTER - 12MJ-12MP	2
7	0301092	ADAPTER, 12FJ-6MJ	1
		· ·	1
8	0301373	BUSHING, 2MP-1-1/2FP	1
9	0301388	ELBOW, 8MJ-8MB90	· ·
10	0301425	CONNECTOR, 6MJ-6MP	1
11	0301438_1	HOSE ASSY - 81" LG.	1
12	0301522	CONNECTOR 6MJ-6MB	1
13	0301881	CONNECTOR 8MJX8MB	1
14	0301894	FILTER ASSEMBLY, SPIN ON	1
15	0301995	ADAPTER, 8FJ-6MJ STRAIGHT	1
16	0302082	FITTING 12MJ-10MB	1
17	0302084	ELBOW, 16MB-16FB90	1
18	0302085	FITTING 12MJ-10MB90	2
19	0302106	REDUCER BUSHING - 20MP-12FP	1
20	0302901_1	HOSE ASSEMBLY, 120" LG	1
21	0302953	BUSHING, 1-1/2MP-1FP	1
22	0303155	PIPE PLUG - 3/4 NPT (MAGNETIC)	1
23	0303188	HOSE ASSY - 75" LG	
24	0303748	HOSE ASSEMBLY, 32"	1
25	0306633	CONNECTOR, 8MB-10FB	1
26	0307527	BULKHEAD - 12MJ-12MP (W/NUTS)	2
27	0307569	HOSE ASSY - 130" LG	1
28	0307593	BULKHEAD ADAPTER 6MJ-6MP-BLKHD	1
29	0307594	QUICK DISCONNECT - FEMALE	1
30	0307595	QUICK CONNECT - MALE	1
31	0308138	QUICK CONNECT - MALE	2
32	0308139	QUICK DISCONNECT - FEMALE	2
33	0308169	PUMP - BIROT PKS11-2BSSL-30 W/RVLV	1
34	0308246	OIL TANK - 15 GAL. WLA4150	1
35	0310398	HANDLE - DIVERTER VALVE	5
36	0310844	VALVE - 5-SPOOL 12V WALVOIL DTU	1
37	0718107	ANGLE - QUICK CONNECT	1
38	9012945	3/4 NPT STREET TEE	1
39	HC1335	PIPE NIPPLE 1" CLOSED THREAD	1
40	HC1338	BALL VALVE, 1" BRASS	1
		,	

Section I - PARTS (cont'd) WINCH HYDRAULICS & AIR FREE SPOOL

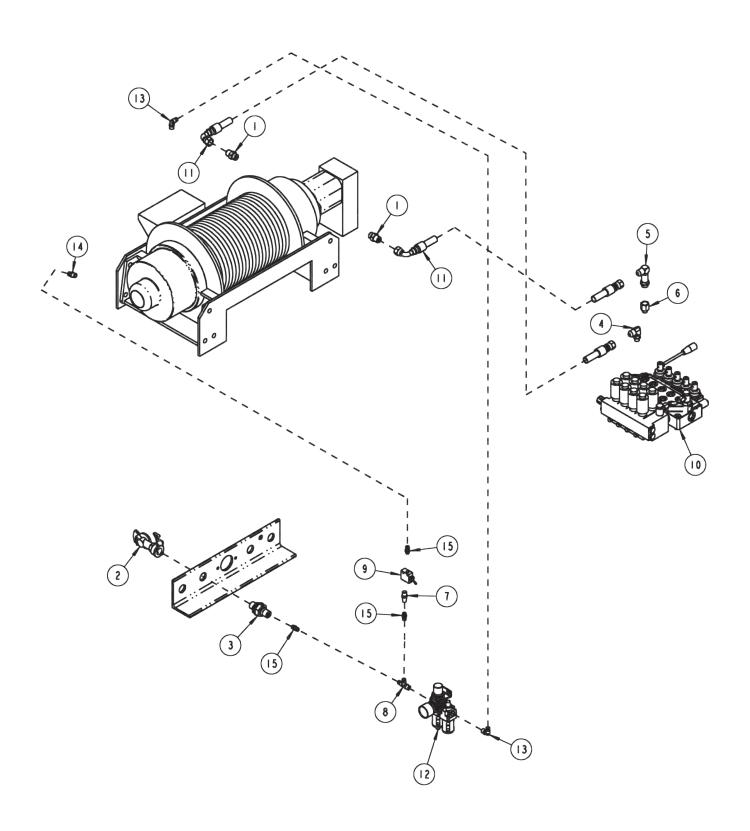

Section I - PARTS (cont'd) WINCH HYDRAULICS & AIR FREE SPOOL

		D-00D/D-101/	071
ITEM PAR	KI NUMBEK	DESCRIPTION	QIY
1 2 3 4 5 6 7 8 9 10 11 12 13 14	0301944 GLA 0301946 FITT 0302276 ELB 0302508 ELB 0302704 CON 0303735 BRE 0306983 FITT 0307510 AIR 0310844 VALV 0312688 HOS 0909085 KIT, 9011053 NIPF	DESCRIPTION INECTOR 8MJX8MB D HAND COUPLING TING - BULKHEAD CONNECTOR OW, 8MJ-6MB90 OW, 8MJ-6MB90LL INECTOR 10MPX8FB IATHER VENT- 1/4MP TING - MALE RUN TEE, 1/4T-1/4NPT MALE SWITCH - 3 WAY TOGGLE VE - 5-SPOOL 12V WALVOIL DTU SE ASSY - 110" AIR FLR/REG/LUBE COMBO 1/4 TING - ELBOW,1/4T-1/4NPT MALE PLE-1/4 X 1/4 NPT INECTOR - 1/4 TUBE X 1/8 NPT STR	QTY 2 1 1 1 1 1 1 2 1 3

NOTES

NOTES

